



ETHANOL GAS STANDARD CYLINDER REPORT

NORTH DAKOTA OFFICE OF ATTORNEY GENERAL

CRIME LABORATORY DIVISION-TOXICOLOGY SECTION/BREATH ALCOHOL PROGRAM

SFN 59282 (08/2018)

Chemical Test Operator Name (Print) <i>Sean Murphy</i>		
Location <i>Bottineau Co. Sheriff Dept</i>	Intoxilyzer® Serial Number <i>80-004936</i>	
Gas Lot Number <i>02621080A1</i>	Gas Cylinder Number <i>11</i>	Gas Expiration Date <i>03/05/2023</i>

Check When Done:

- 1. Scan/Enter Gas Cylinder Information (Level 1, Function S).
- 2. Perform an ACA Test (Level 1, Function C).
Write in the ACA Test Results (Reported to 3 Digits, Ex. 0.081).
 - A. *0.078* AC
 - B. *0079* AC
 - C. *0.079* AC
- 3. Complete the Top Portion of the Intoxilyzer® Record (SFN50496, Form 120-G) and Place it by the Intoxilyzer® for Use.
- 4. File Previous Intoxilyzer® Record (SFN50496, Form 120-G) at the Intoxilyzer® Location at the Agency.
- 5. Send the Following to the Crime Laboratory:
 - A. Ethanol Gas Standard Cylinder Report (SFN59282, Form 105-G).
 - B. ACA Test Record.

Chemical Test Operator Signature <i>[Signature]</i>	Date <i>06-14-2022</i>
Reviewed By (Crime Laboratory Use Only) <i>Janelle Putschner</i>	Date <i>06/23/2022</i>

Intoxilyzer Test Record and Checklist
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer Alcohol Analyzer
North Dakota Model 8000 SN 80-004936
Location = BOTT 8164.14.00 09/16
06/14/2022 17:33

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	17:33
02 Std. Gas	0.078	17:34
03 Room Air	0.000	17:34
04 Std. Gas	0.079	17:35
05 Room Air	0.000	17:35
06 Std. Gas	0.079	17:36
07 Room Air	0.000	17:36


Lot No = 02621080A1

Cyl No = 11

Exp Date = 03/05/2023

County = 05

Oper No. = 039117

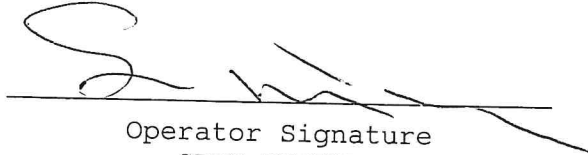

Operator Signature
SEAN MURPHY

Remarks:

Form 106-I8000