



INTOXILYZER® 8000 INSTALLATION AND REPAIR CHECKOUT
 NORTH DAKOTA OFFICE OF ATTORNEY GENERAL
 CRIME LABORATORY DIVISION-TOXICOLOGY SECTION/BREATH ALCOHOL PROGRAM
 SFN 59281 (06/2018)

Serial Number <i>80-005981</i>	Instrument Location <i>Langdon</i>
Reason for Install/Repair <input type="checkbox"/> Install After Receiving From Crime Laboratory <input type="checkbox"/> Install After Location Change <input checked="" type="checkbox"/> Other (Specify) <u><i>Repair & checks</i></u>	

Check When Done:

- 1. Surge Protector Installed/Property Grounded.
- 2. Telephone Line Connected to Intoxilyzer® 8000.
- 3. Breath Tube Heated.
- 4. Enter Preliminary Data (i.e. Date, Time, DST (Y), and Location; Level 2, Function E).
- 5. Scan/Enter Gas Cylinder Information (Level 1, Function S).
- 6. Run Tests:
 - A. Print Test (Level1, Function P).
 - B. ACA Test (Level 1, Function C).
 - C. Radio Frequency Interference (RFI) Test (CMS Mode or Level 1, Function B or C; Key Radio During Test).
- 7. Repair and/or Maintenance Performed (if any): *Plugged in Keyboard*
- 8. Complete the Top Portion of the Intoxilyzer® Record (SFN50496, Form 120-G) and Place it by the Intoxilyzer® for Use.
- 9. File Previous Intoxilyzer® Record (SFN504096, Form 120-G) at the Intoxilyzer® Location at the Agency.
- 10. Send the Following to the Crime Laboratory: Completed Intoxilyzer® 8000 Installation and Repair Checkout (SFN59281, Form 104-G), Print Test, ACA Test, and RFI Test.

Field Inspector Signature <i>[Signature]</i>	Date <i>8-4-22</i>
---	-----------------------

Crime Laboratory Use Only

This installation has been reviewed and the instrument is approved to be used for the analysis of breath to determine alcohol concentration from the date the Field Inspector performed the installation. This record on file at the Office of Attorney General, Crime Laboratory Division, in the County of Burleigh, North Dakota, is certified to be a true and correct copy of the documents received.

Reviewed/Certified By <i>Janelle Pertschiller</i>	Certified Date <i>8/18/2022</i>
--	------------------------------------

*Called 8/10/22 - no answer
 8/11/22 - Gabriel stated all was done was the keyboard plugged in. I told him, no need to fill out all the paperwork next time - AEN/gjp*


Intoxilyzer Test Record and Checklist
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer Alcohol Analyzer
North Dakota Model 8000 SN 80-005951
Location = LANG 8164.14.00 09/16
08/04/2022 02:02

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	02:02
02 Std. Gas	0.080	02:03
03 Room Air	0.000	02:03
04 Std. Gas	0.080	02:03
05 Room Air	0.000	02:04
06 Std. Gas	0.080	02:04
07 Room Air	0.000	02:05

Lot No = 26021080A1
Cyl No = 29
Exp Date = 10/05/2023
County = 10 Oper No. = 021009

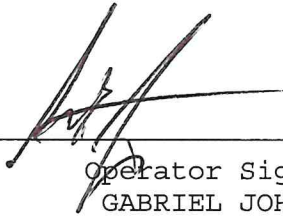

Operator Signature
GABRIEL JOHNSTON

Remarks:

Intoxilyzer Test Record and Checklist
NDOAG Crime Lab. Div., Bismarck, ND 58501


CMI, Inc. Intoxilyzer Alcohol Analyzer
North Dakota Model 8000 SN 80-005951
Location = LANG 8164.14.00 09/16
08/04/2022 02:05

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	02:06
02 Std. Gas	0.081	02:06
03 Room Air	0.000	02:07
04 Std. Gas	0.081	02:07
05 Room Air	RFI*	02:07
06 Room Air	0.000	02:08

*Invalid Test
Inhibited - RFI

Lot No = 26021080A1
Cyl No = 29
Exp Date = 10/05/2023
County = 10 Oper No. = 021009



Operator Signature
GABRIEL JOHNSTON

Remarks: