



ETHANOL GAS STANDARD CYLINDER REPORT
 NORTH DAKOTA OFFICE OF ATTORNEY GENERAL
 CRIME LABORATORY DIVISION-TOXICOLOGY SECTION/BREATH ALCOHOL PROGRAM
 SFN 59282 (08/2018)

Chemical Test Operator Name (Print) <i>Romans, Michelle</i>		
Location <i>Williston</i>		Intoxilyzer® Serial Number <i>80-004944</i>
Gas Lot Number <i>26021080A1</i>	Gas Cylinder Number <i>13</i>	Gas Expiration Date <i>10/5/23</i>

Check When Done:

- 1. Scan/Enter Gas Cylinder Information (Level 1, Function S).
- 2. Perform an ACA Test (Level 1, Function C).
 Write in the ACA Test Results (Reported to 3 Digits, Ex. 0.081).
 A. 0.*083* AC
 B. 0.*083* AC
 C. 0.*082* AC
- 3. Complete the Top Portion of the Intoxilyzer® Record (SFN50496, Form 120-G) and Place it by the Intoxilyzer® for Use.
- 4. File Previous Intoxilyzer® Record (SFN50496, Form 120-G) at the Intoxilyzer® Location at the Agency.
- 5. Send the Following to the Crime Laboratory:
 A. Ethanol Gas Standard Cylinder Report (SFN59282, Form 105-G).
 B. ACA Test Record.

Chemical Test Operator Signature <i>[Signature]</i>	Date <i>1-3-23</i>
Reviewed By (Crime Laboratory Use Only) <i>[Signature]</i>	Date <i>1/4/23</i>


Intoxilyzer Test Record and Checklist
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer Alcohol Analyzer
North Dakota Model 8000 SN 80-004944
Location = WILL 8164.14.00 09/16
01/03/2023 13:20

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	13:21
02 Std. Gas	0.083	13:21
03 Room Air	0.000	13:22
04 Std. Gas	0.083	13:22
05 Room Air	0.000	13:23
06 Std. Gas	0.082	13:23
07 Room Air	0.000	13:24

Lot No = 26021080A1
Cyl No = 13
Exp Date = 10/05/2023
County = 53 Oper No. = 130739

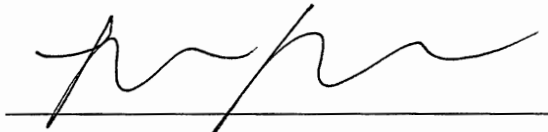

Operator Signature
MICHELLE ROMANS

Remarks:

ACA Test

Form 106-I8000