



ETHANOL GAS STANDARD CYLINDER REPORT

NORTH DAKOTA OFFICE OF ATTORNEY GENERAL
CRIME LABORATORY DIVISION-TOXICOLOGY SECTION/BREATH ALCOHOL PROGRAM
SFN 59282 (08/2018)

Chemical Test Operator Name (Print) <i>Trent Naser</i>		
Location <i>SHER</i>	Intoxilyzer® Serial Number <i>80-004201</i>	
Gas Lot Number <i>19825080A2</i>	Gas Cylinder Number <i>29</i>	Gas Expiration Date <i>09/05/2027</i>

Check When Done:

- 1. Scan/Enter Gas Cylinder Information (Level 1, Function S).
- 2. Perform an ACA Test (Level 1, Function C).
Write in the ACA Test Results (Reported to 3 Digits, Ex. 0.081).
A. 0. *078* AC
B. 0. *079* AC
C. 0. *079* AC
- 3. Complete the Top Portion of the Intoxilyzer® Record (SFN50496, Form 120-G) and Place it by the Intoxilyzer® for Use.
- 4. File Previous Intoxilyzer® Record (SFN50496, Form 120-G) at the Intoxilyzer® Location at the Agency.
- 5. Send the Following to the Crime Laboratory:
A. Ethanol Gas Standard Cylinder Report (SFN59282, Form 105-G).
B. ACA Test Record.

Chemical Test Operator Signature <i>Trent Naser</i>	Date <i>05/23/2026</i>
Reviewed By (Crime Laboratory Use Only) <i>Anna Ingemansen</i>	Date <i>16 June 2026</i>


Intoxilyzer Test Record and Checklist
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer Alcohol Analyzer
North Dakota Model 8000 SN 80-004201
Location = SHER 8164.14.00 09/16
05/23/2026 20:23

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	20:23
02 Std. Gas	0.078	20:24
03 Room Air	0.000	20:24
04 Std. Gas	0.079	20:25
05 Room Air	0.000	20:25
06 Std. Gas	0.079	20:25
07 Room Air	0.000	20:26

Lot No = 19825080A2
Cyl No = 029
Exp Date = 09/05/2027
County = 42 Oper No. = 020320

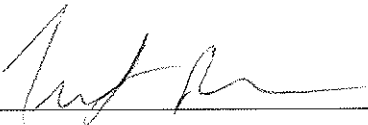

Operator Signature
TRENT NASER

Remarks:

Form 106-I8000