







Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer      Alcohol Analyzer  
North Dakota Model 8000      SN 80-005955  
Location = DUNN      8164.14.00 09/16  
04/18/2019      11:26

WET CAL CHECK

Test	AC	Time
01 Room Air	0.000	11:26
02 Std. Sol.	0.305	11:27
03 Room Air	0.000	11:28
04 Std. Sol.	0.305	11:28
05 Room Air	0.000	11:29
06 Std. Sol.	0.304	11:30
07 Room Air	0.000	11:30

08 Sim Temp = 34.0°C

Simul Ser No = DR7111

Std Sol No = 17350

County = 13

Oper No. = 666666



Operator Signature

CHARLES EDER

Remarks:

*HIGH AC*  
*0.300 AC*

Form 106-I8000


Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer      Alcohol Analyzer  
North Dakota Model 8000      SN 80-005955  
Location = DUNN      8164.14.00 09/16  
04/18/2019      11:11

Test	AC	Time
01 Room Air	0.000	11:11
02 *Subject Test	INT*	11:12
03 Room Air	0.000	11:13

\*Invalid Test  
Interferent Detected

Sub Name = DISCOVER, THE SPIRIT  
Sub DOB = 01/01/1982  
Sub Sex = Female      Weight = 150  
Test = DUI      Cit = INTERFERENT  
Dr. Lic. = ND/DIS821456  
Lot No = 17618080A3  
Cyl No = 68  
Expiration Date = 08/05/2020  
County = 13      Oper No. = 666666



Operator Signature  
CHARLES EDER

Remarks:

*Interferent Check*  
*0.10AC + 0.05% ACETONE*

Form 106-I8000

Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501


CMI, Inc. Intoxilyzer            Alcohol Analyzer  
North Dakota Model 8000        SN 80-005955  
Location = DUNN                8164.14.00 09/16  
04/18/2019                        11:13

Test	AC	Time
01 Diagnostic	OK	11:14
02 Room Air	0.000	11:14
03 *Subject Test	RFI*	11:14
04 Room Air	0.000	11:15

\*Invalid Test  
Inhibited - RFI

Sub Name = DISCOVER, THE SPIRIT  
Sub DOB = 01/01/1982  
Sub Sex = Female                Weight = 150  
Test = DUI                        Cit = RFI CHECK  
Dr. Lic. = ND/DIS821456  
Lot No = 17618080A3  
Cyl No = 68  
Expiration Date = 08/05/2020  
County = 13                        Oper No. = 666666

I followed the Approved Method and the instructions displayed by the Intoxilyzer in conducting this test.

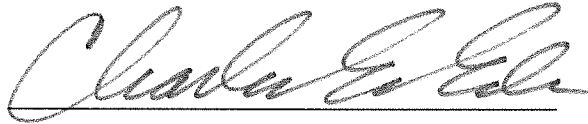

Operator Signature  
CHARLES EDER

Remarks:

RFI CHECK

Form 106-I8000

Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer      Alcohol Analyzer  
North Dakota Model 8000      SN 80-005955  
Location = DUNN      8164.14.00 09/16  
04/18/2019      11:04

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	11:05
02 Std. Gas	0.082	11:06
03 Room Air	0.000	11:06
04 Std. Gas	0.082	11:07
05 Room Air	0.000	11:07
06 Std. Gas	0.082	11:07
07 Room Air	0.000	11:08

Lot No = 17618080A3  
Cyl No = 68  
Exp Date = 08/05/2020  
County = 13

Oper No. = 666666



Operator Signature  
CHARLES EDER

Remarks:

*CALIBRATION CHECK*  
*0.080 AC*

Form 106-I8000

Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer      Alcohol Analyzer  
North Dakota Model 8000      SN 80-005955  
Location = DUNN      8164.14.00 09/16  
04/18/2019      11:16

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	11:16
02 Std. Gas	0.082	11:17
03 Room Air	0.000	11:17
04 Std. Gas	0.083	11:18
05 Room Air	0.000	11:18
06 Std. Gas	0.083	11:18
07 Room Air	0.000	11:19

Lot No = 17618080A3  
Cyl No = 68  
Exp Date = 08/05/2020  
County = 13      Oper No. = 666666



Operator Signature  
CHARLES EDER

Remarks: CALIBRATION CHECK  
0.080 AC

Form 106-I8000




Intoxilyzer Test Record and Checklist  
NDOAG Crime Lab. Div., Bismarck, ND 58501

CMI, Inc. Intoxilyzer      Alcohol Analyzer  
North Dakota Model 8000      SN 80-005955  
Location = DUNN      8164.14.00 09/16  
04/18/2019      11:31

DRY CAL CHECK

Test	AC	Time
01 Room Air	0.000	11:32
02 Std. Gas	0.083	11:32
03 Room Air	0.000	11:33
04 Std. Gas	0.083	11:33
05 Room Air	0.000	11:34
06 Std. Gas	0.082	11:34
07 Room Air	0.000	11:35

Lot No = 17618080A3  
Cyl No = 68  
Exp Date = 08/05/2020  
County = 13      Oper No. = 666666

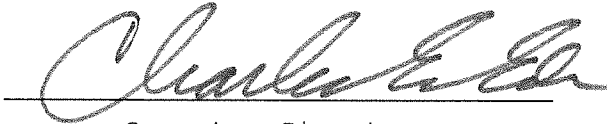

Operator Signature  
CHARLES EDER

Remarks:

CALIBRATION CHECK  
0.080AC

Form 106-I8000